

Laser protection window, filter - 014059, dimensions 100 x 200 mm, thickness 7.5 mm


Product information:

Item no.: 100-G014059-100x200

Application: Diode (980 nm) Disc (1030 nm) Nd:YAG (1064 nm) Faser (976 – 1080 nm)
Telecom (1550 nm) Ho:YAG (2100 nm) Er:YAG (2940 nm) CO₂ (10600 nm) , VLT
(Visible light transmission): 70 %

Filter color: light grey

Filter material: mineral glass, laminated

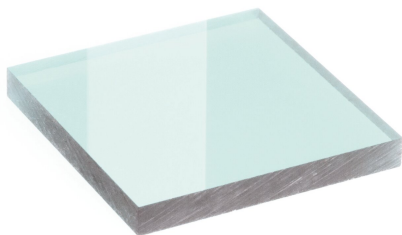

Laser protection window made of light gray mineral glass suitable for Diode (980 nm), Disk (1030 nm), Nd:YAG (1064 nm), Fiber (976 - 1080 nm), Telecom (1550 nm), Ho:YAG (2100 nm), Er:YAG (2940 nm) and CO₂ (10600 nm) lasers

Certified protection specifications for EN 207

Wavelengths	Protection levels
• 940-1000	DIR LB4 (OD4+)
• >1000-1400	D LB7 + IR LB8 (OD8+)
• >1400-1800	D LB5 + I LB4 (OD5+)
• >1800-3000	DI LB4 (OD4+)
• 10000-11000	DI LB5 (OD5+)
	PF CE

Properties:

Laser protection windows enable your employees to safely observe the processes in a laser system. Regardless of whether you want to integrate the laser protection windows in machine enclosures or in movable walls, we offer you the right, tested protection for your laser system, for your laser equipment and for your laser application. Depending on the desired protection level or window size, you can choose between windows made of glass or plastic. In addition to a variety of standard sizes, custom cuts are also possible thanks to our in-house production.

The **laser safety filter 014059** is particularly suitable as laser protection for powerful **Diode (980 nm), Disk (1030 nm), Nd:YAG (1064 nm), Faser (976 – 1080 nm), Telecom (1550 nm), Ho:YAG (2100 nm), Er:YAG (2940 nm)** and **CO2 (10600 nm) Lasers**, consists of a light gray mineral glass and impresses with a daylight transmission of approx. 70% at low thickness. The laser safety filter is **CE certified** according to the regulations of **DIN EN 207**.

- dimensions 100 x 200 mm
- also available in the standard size [210 x 297 mm](#)
- other customized sizes available on request
- suitable [window frames](#) available on request



- For a perfect and safe cleaning of this filter we recommend this [cleaning spray](#).

