
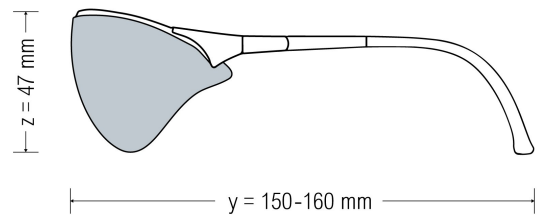


Laser safety eyewear TERMINATOR Filter: 0315, frame color black/white

Product information:

Item no.:	000-K0315-TERM-54
Application:	Nd:YAG (1064 nm) Diode (940 – 980 nm) , VLT (Visible light transmission): 65 %
Filter color:	green
Frame color:	black/white
Filter material:	polymer

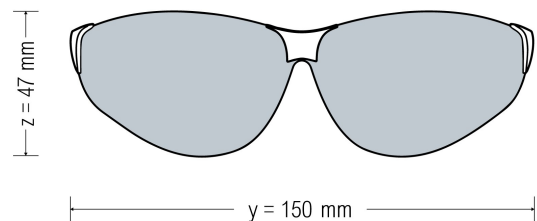

Alle Angaben ohne Gewähr.
All information is provided without guarantee.

Laser safety goggles with light green plastic filter,
suitable for Diode (940-980 nm) und Nd:YAG (1064
nm) lasers

Certified protection specifications for EN 207

Wavelengths	Protection levels
• 950-970<	DIR LB6 (OD6+)
• 970-1064	D LB6 + IR LB7 (OD7+)
	PF S CE

Properties:

The **TERMINATOR** is a light and sporty **laser safety spectacles** made of a special polymer. This lightweight frame offers a perfect fit, due to a comfortable and soft nose-pad, which can be individually adjusted by the user. Furthermore the temples can be individually adjusted in length and angle. The wrap-around lenses provide perfect side impact protection without confining the field of vision. Ventilation slots between lenses and frame allow an optimized air circulation, which prevents fogging.

The **Laser Safety Filter 0315** is suitable for powerful **diode laser (950 nm)** and **Nd:YAG laser (1064 nm)**, in particular, but the filter also covers additional laser wavelengths. The laser safety filter consists of a green polycarbonate, and offers a high visual light transmission (VLT) of 65% despite its minor filter thickness. The laser safety filter is **CE certified**, meeting the demands of the standard **EN 207**.

For a perfect and safe cleaning of this filter we recommend this [cleaning spray](#).



Please calculate the necessary protection levels for your laser application, with care and compare them to the given protection level of the laser safety goggle. We will gladly advise you on the selection of the right safety gear.