


Active LCD-Shutter

Product information:

Item no.: 970-LCD-50x30

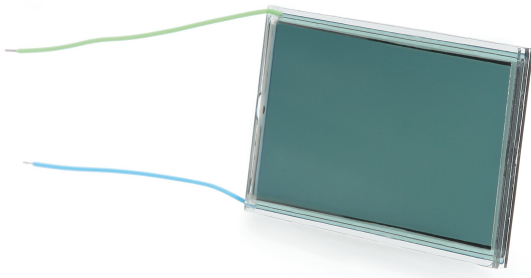

Properties:

The shutter filters with 1 LCD are available in welding protection level 11 and have Shade 3 in the open state.

At a square-wave voltage of 15 V and 40 Hz, the above-mentioned shutters achieve a switching time from the bright open state to the darkened state within 500 microseconds (0.5ms).

The protective glasses on the outside prevent the LCD shutters from being scratched and damaged, making them easy to clean.

- Dimensions: 50 x 30 mm
- Total thickness 3 mm (consisting of 1 LCD shutter and two protective glasses outside with the thickness of 0.55 mm, coated with UV/ IR filter)